

# Fertile Earth Bulletin

## Winterization & Service of the Fertile Earth Feeder



### Fertile Earth Service Plug

for winterization & service of the  
Fertile Earth Landscape Feeder

*Less Water*

*Fewer Chemicals*

*Better Results!*



Fertile Earth Corporation  
883 West Baxter Drive  
South Jordan, UT 84095

Toll Free: 877-88-EARTH  
Main: 801-327-7211

[www.fertileearth.com](http://www.fertileearth.com)

### IMPORTANT: WINTERIZE THE FEEDER!

**DO NOT INJECT AIR INTO A SPRINKLING SYSTEM THAT HAS A FERTILE EARTH FEEDER INSTALLED WITHOUT FIRST INSTALLING A SERVICE PLUG OR TEMPORARY BYPASS.** Injecting air into the sprinkling system will spin the internal impeller and gear system of the Fertile Earth Feeder too fast which will cause damage to the injector. The Fertile Earth Feeder Service Plug is designed to facilitate air injection for winterization or temporary replacement of the injector element for service.




### INSTALLING THE SERVICE PLUG

Turn off water main with one valve open to relieve line pressure before proceeding. Remove the Fertile Earth Feeder reservoir or tank attachments and install the service plug as follows.

1. Remove the Snap Ring
2. Gently pull out injector
3. Insert Service Plug
4. Perform winterization services
5. Remove Snap Ring & Plug
6. Clean, Grease & Replace O-Ring
7. Insert Injector
8. Replace the Snap Ring

### INSTALLING A BYPASS SYSTEM

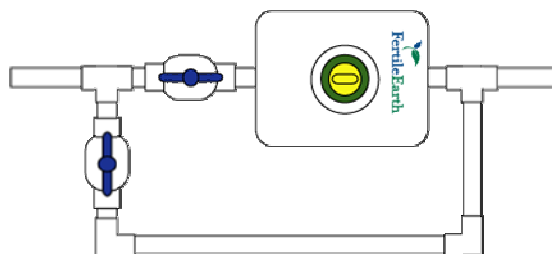

**A temporary bypass can also be constructed by inserting two ball valves in front of the Fertile Earth Feeder as shown in the illustration above.**

