

Quick start guide **Front**
trim size 5.82"x8.26"

SMARTLINE

Quick Start for SmartLine Controllers Standard Programming



Use PGM to select program A, B, C, or D.

Use UP ▲ and DOWN ▼ arrow buttons to set values for flashing options.

Use NEXT and BACK buttons to select options and scroll between zones.

SmartLine Standard Programming
(See reverse side of card for Auto Adjust Programming Instructions).

Manual Operation

- 1** • Set time of day (AM/PM) and month/day/year.
- 2** • Set zone run times (1 min to 9 hours 55 minutes) for Programs (A, B, C, D) in use.
- 3** • Set daily start times (AM/PM) for Programs (A, B, C, D) in use.
- 4** • Set watering days by selecting days of week or interval (1 to 30 days) or odd or even days for Programs (A, B, C, D) in use.
- 5** • Set omit times, days, and dates to accommodate watering blackout periods (optional).
- 6** • Set seasonal % by month for Programs A, B, C, D (optional).
- 7** • Return dial to RUN.



Manual Test

Turn dial to MANUAL TEST. Use UP and DOWN arrows to enter run time (10 seconds to 10 minutes) for all zones with assigned run time. **Return dial to RUN to start.**



Manual Zone

Turn dial to MANUAL ZONE. Use NEXT button to select zone to run. Use UP and DOWN arrow keys to select zone run time (1 min to 9 hours 55 minutes). **Return dial to RUN to start.**



Refer to Owner's Manual for Advanced Functions dial position.




Quick Start for SmartLine Auto Adjust Programming

1 Installation of optional SLW weather monitor and standard programming is required for Auto Adjust programming.

- Verify correct time and date at Set Time/Date dial position.
- Enter Zone Run Times, Start Times, and Days. See Standard Programming instructions.

2 • Initiate communication with the SLW weather monitor. You will need to go to the SLW weather monitor and push down on the Rain Sense tab at the top for 15 seconds. If communications have been established, you will see an antenna icon on the bottom of the display. Flashing antenna icon indicates communication has occurred in last five minutes. See Owner's Manual.

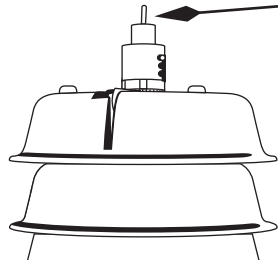

3 • Turn dial to steps noted below. Use NEXT and UP and DOWN arrow keys for the following program steps:

4 • Enter ZIP Code or Latitude.

5 • Enter Sprinkler Type or Precipitation Rate for each zone. Unused zones should be set to OFF.

6 • Enter Plant Type for each zone.

7 • Enter Soil Type and Degree of Slope for each zone.

8 • Enter More or Less setting (optional). Set % by zone to accommodate factors like shade, wind, and sprinkler inefficiencies.

9 • Return dial to RUN.

