

The following Advanced Functions were added to the SL800 controller after the Owner's Manual was printed:

#### 6.4.1 SLW DLY

This feature allows the user to adjust the factory set 48 hour watering delay that will occur after a rain event shutdown if you are using an SLW Weather Station for Auto Adjust Watering. To eliminate the 48 hour delay or to reduce the factory default to a lesser number of hours, turn the dial to Advanced Functions and use an arrow button to select SLW DLY. Press the NEXT button and 48 HOURS will show in the display. Use the up or down Arrow button to select the desired delay.

#### 6.5.1 RUN/SOAK

This feature allows the user to review expected Run/Soak schedules that will occur when the controller is in the Auto Adjust mode. Turn the dial to Advanced Functions. Use an arrow button to go to REVIEW and press the NEXT button. Use the up arrow button to advance to RUN/SOAK. Press the NEXT button and zone 01 will show in the display. Press NEXT again and RUN with a time will show. This is the maximum run time the controller can do in Auto Adjust before going to SOAK. Press NEXT again and SOAK will show in the display with a time. This is the minimum time the station must soak before it is ready to run again. Auto Adjust Run/Soak times can be changed by adjusting the soil and slope settings at SOIL TYPE on the programming dial.



#### 6.9.1 CLR ALL

This feature is similar to CLR PGM except that it clears all user programmed data for all four programs. Turn the dial to Advanced Functions and use an arrow button to select CLR ALL. Press the NEXT button and KEEP will show in the display. Press the up or down arrow button to select CLEAR. Press NEXT to clear all programs. The display will show CLEARING to confirm that all programs have been cleared. Note: This function is not the same as the Total Master Reset as described under 7.1 in your Owner's Manual.

#### 6.12 DEFAULT

Once the controller has been programmed, go to Advanced Functions and use an arrow button to select DEFAULT. Press NEXT and STORE will appear on the display. Press NEXT one more time and wait several seconds. The display will show COMPLETE to confirm that you have successfully stored your program. If the controller has had the operating program changed and you want to return to the stored program, go to DEFAULT, press NEXT and one of the arrow buttons. The display will show RETRIEVE. Press NEXT and the display will show COMPLETE to confirm that the DEFAULT program has been restored as the operating program.

